


Understanding your Child's Chromebook

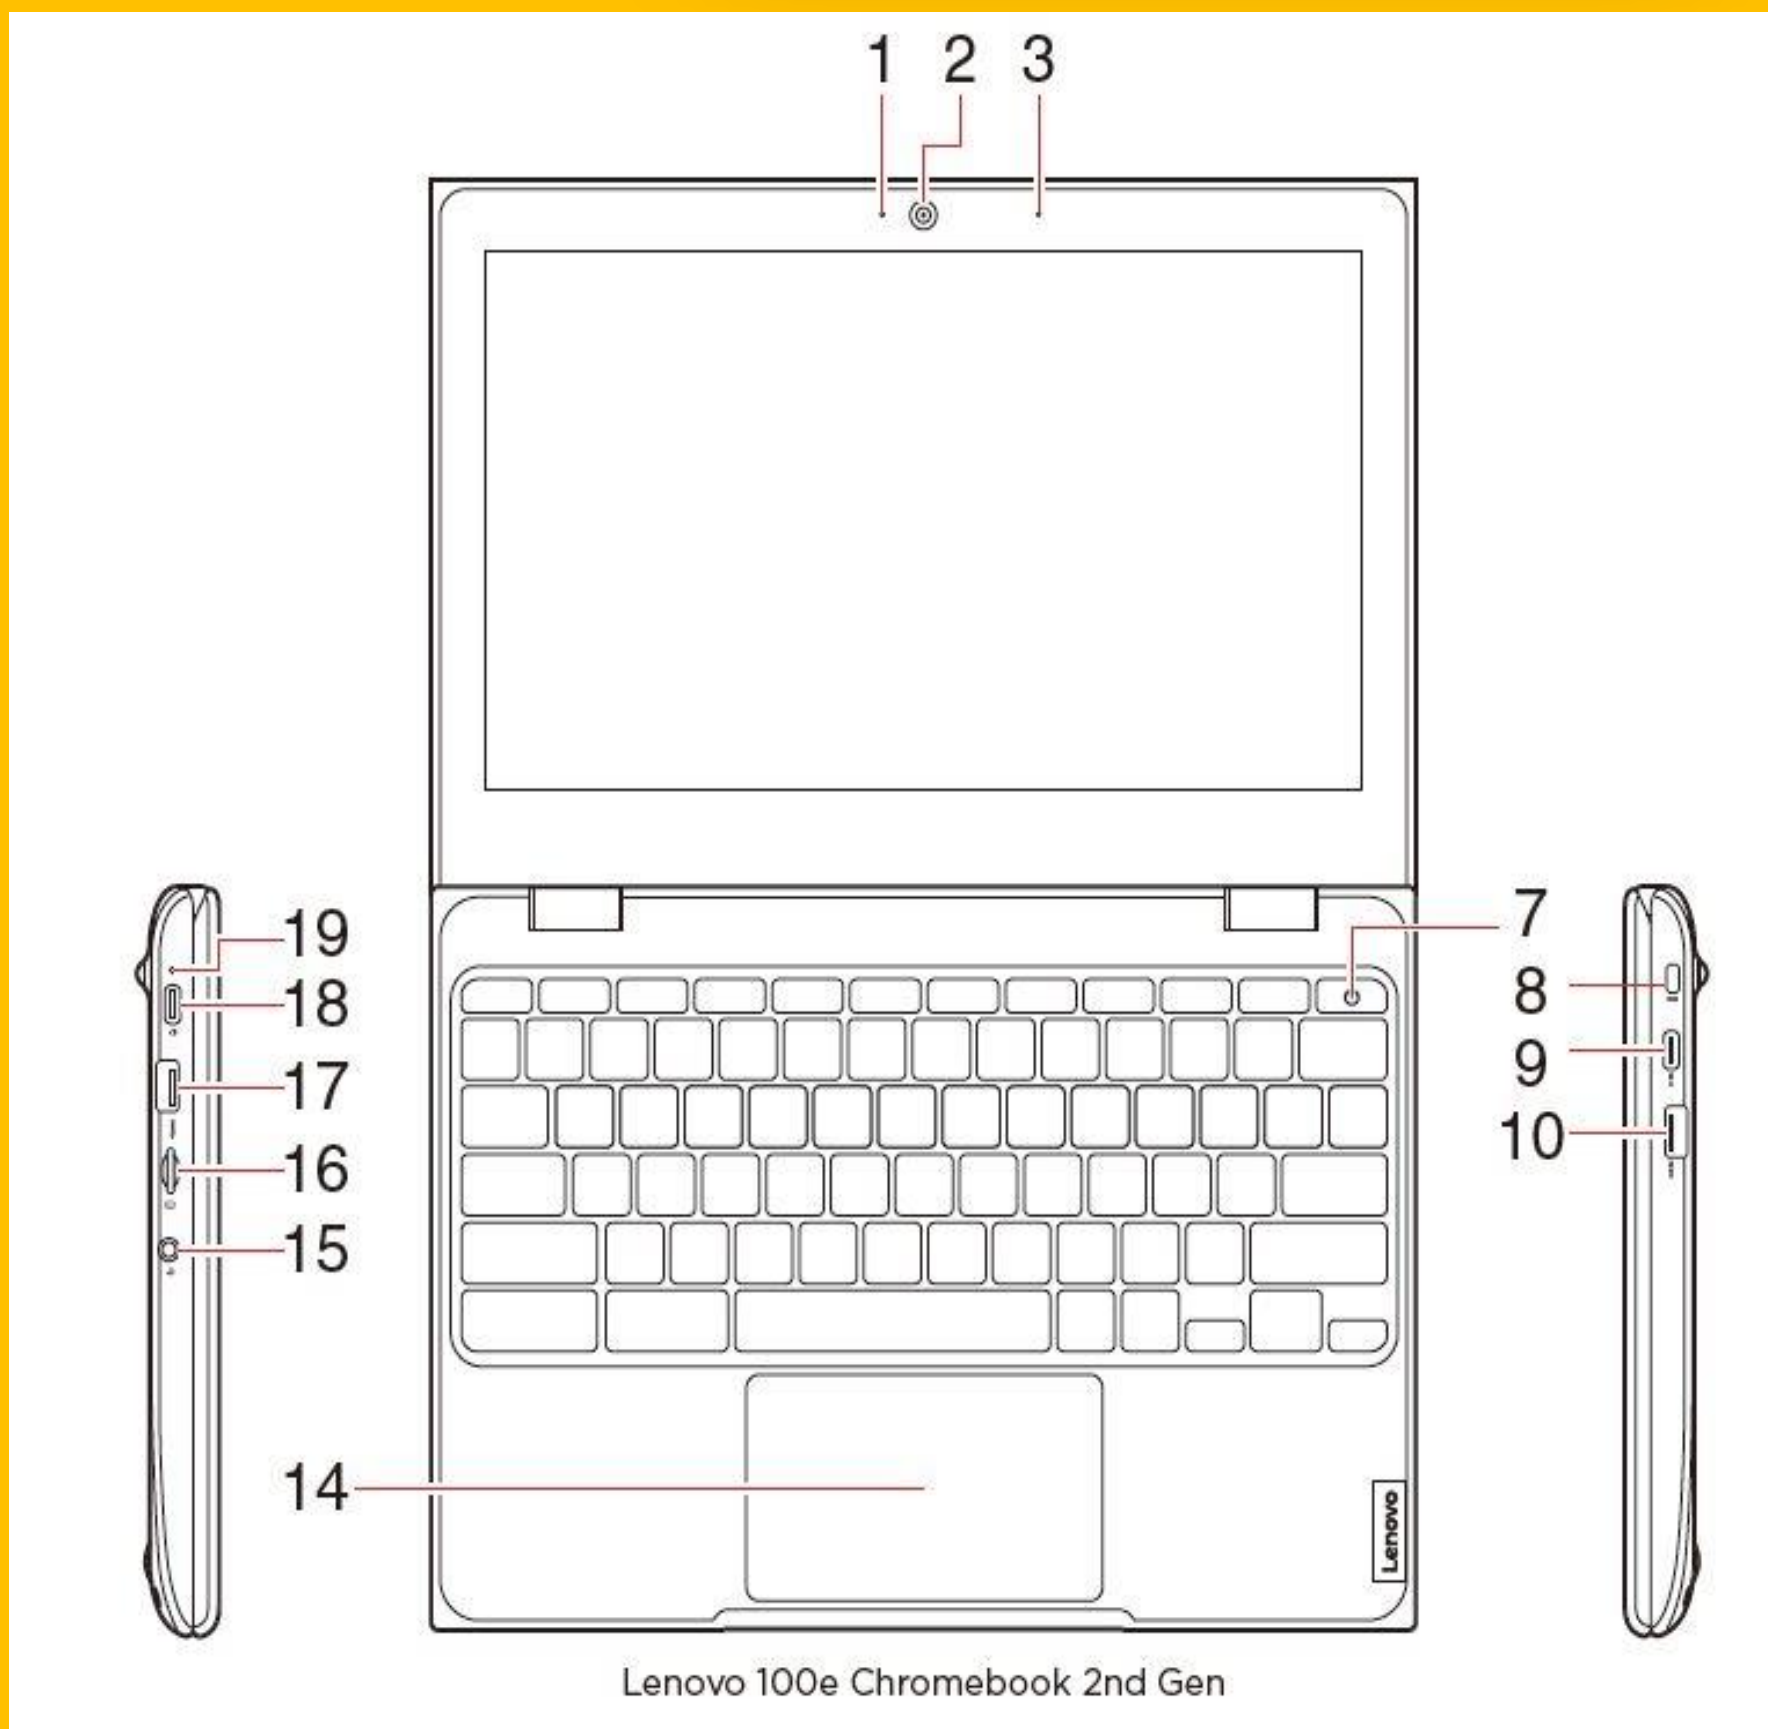

Lenovo 100e Chromebook 2nd Gen

1 Front webcam light

2 Front webcam

3 Microphone

7 Power Key (right side)

9 USB-C Connector (right side)

10 USB (right side)

14 Touchpad

15 Audio (left side)


17 USB (left side)

18 USB Charger (left side)

19 Light showing charging (left side)

Please email us at Technology@dcsholars.org with any questions !


Charging Your Chromebook

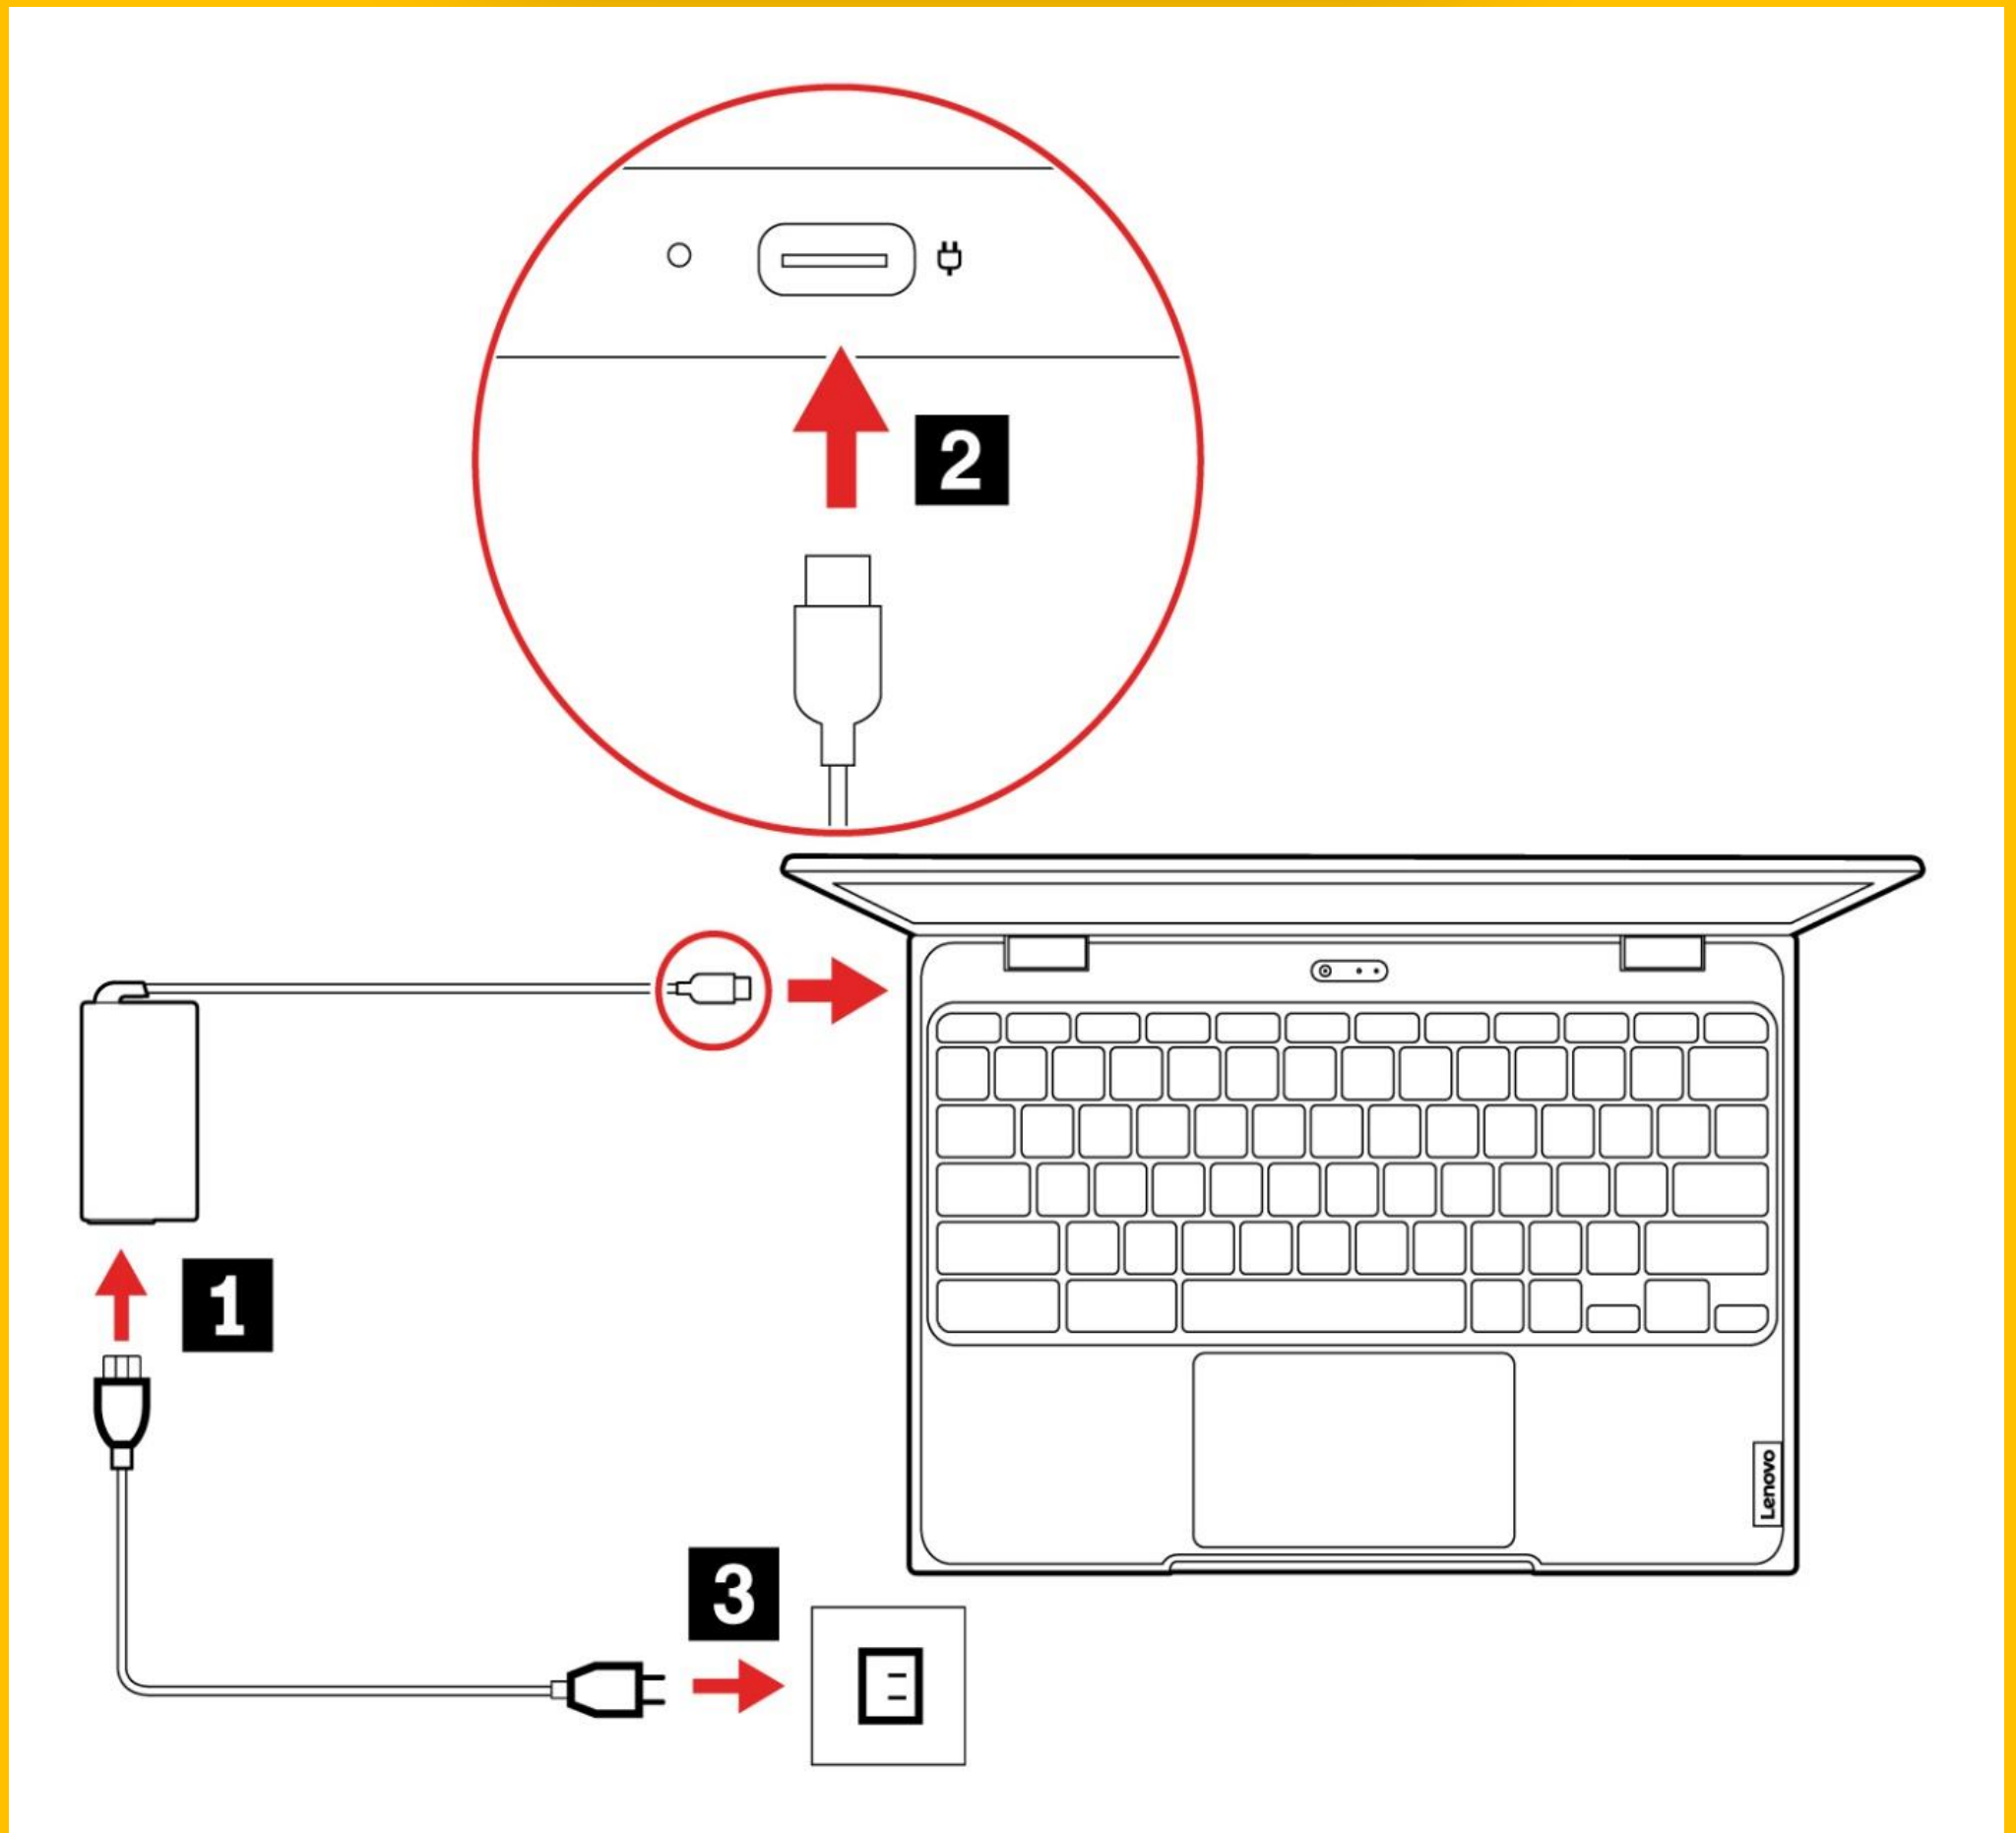

1. Connect your power cord to the USB-C on the left-hand side.

Please email us at Technology@dcsholars.org with any questions !

Chromebook 101

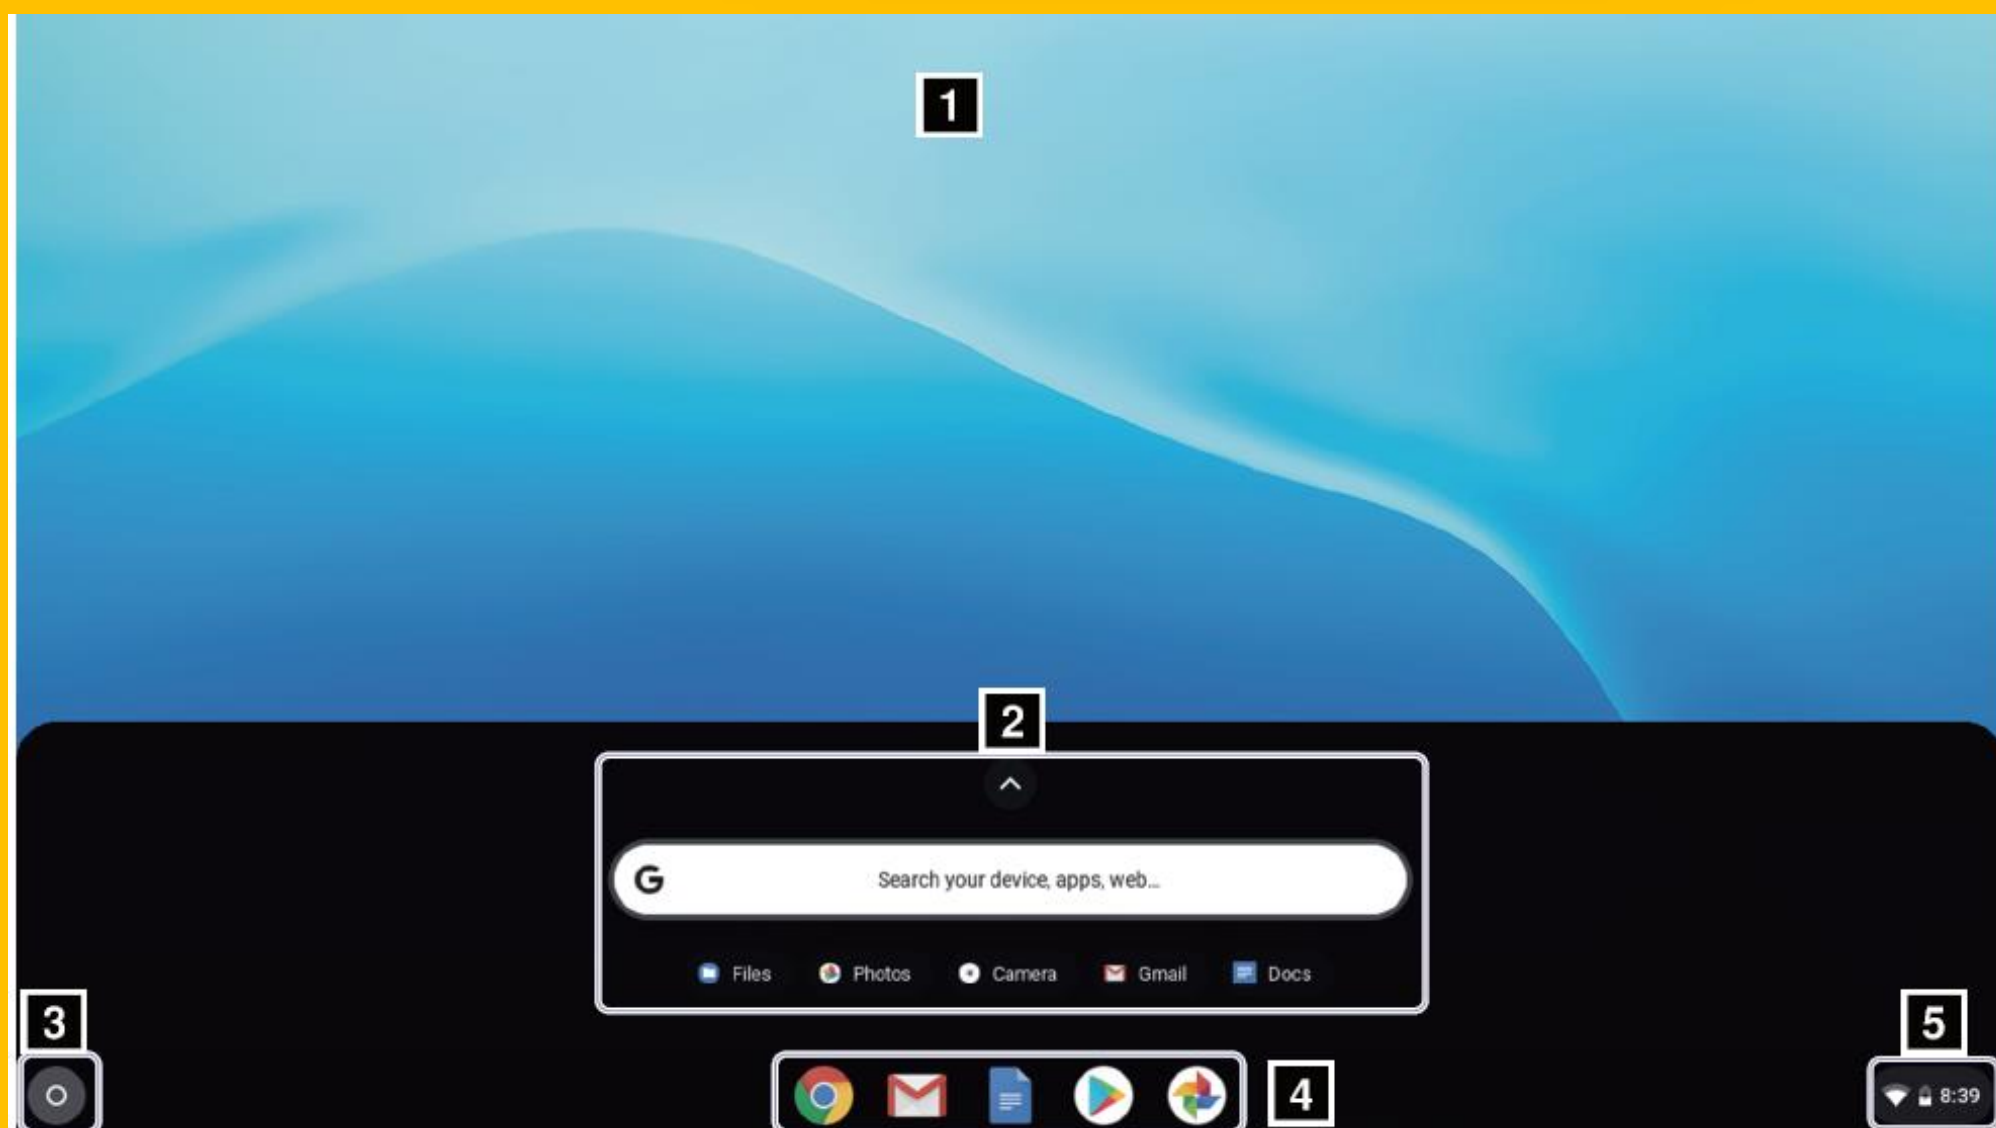

2


- **Search box and the App Launcher**
In this box type what you are looking for:
App
Web Page

4

- **Shelf**
 - App's you use often are here





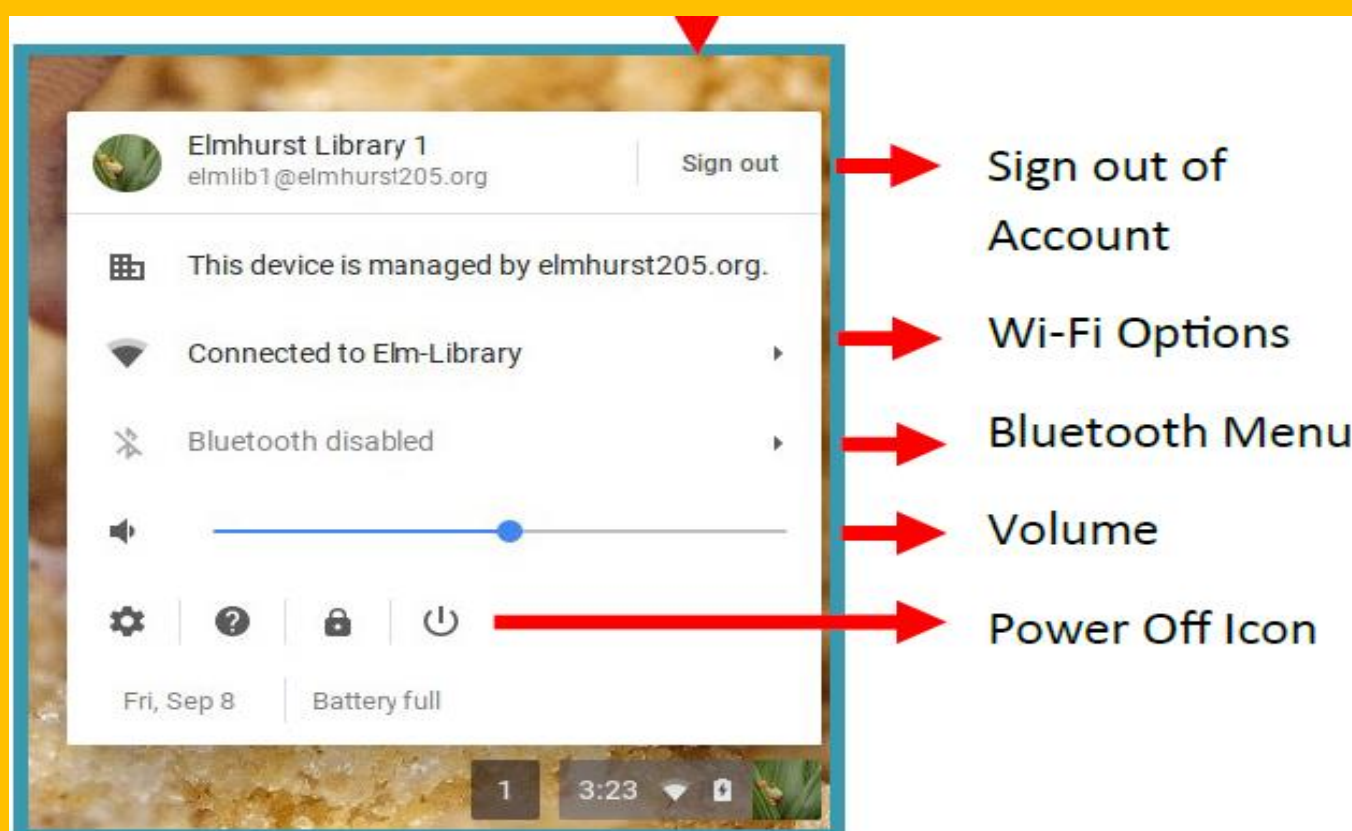






5

- **System Tray**
 - Click here to :
 - **Connect to Wifi**
 - **Check Settings**



Chromebook Keys

Unique keys on your Chromebook keyboard

-  Search your apps and the web
To turn Caps Lock on or off, press **Alt + Search**.
-  Go to the previous page in your browser history (F1)
-  Go to the next page in your browser history (F2)
-  Reload your current page (F3)
-  Hide the tabs and launcher in full-screen Immersive mode (F4)
-  Show all windows in Overview mode (F5)
-  Dim the screen (F6)
-  Make the screen brighter (F7)
-  Mute (F8)
-  Lower the volume (F9)
-  Raise the volume (F10)


Capitalize: Press Shift + (The letter you want to type)

Connecting to Zoom

There are two options to join your Zoom meeting.

1

Open Chrome Browser
Then type in bit.ly link given

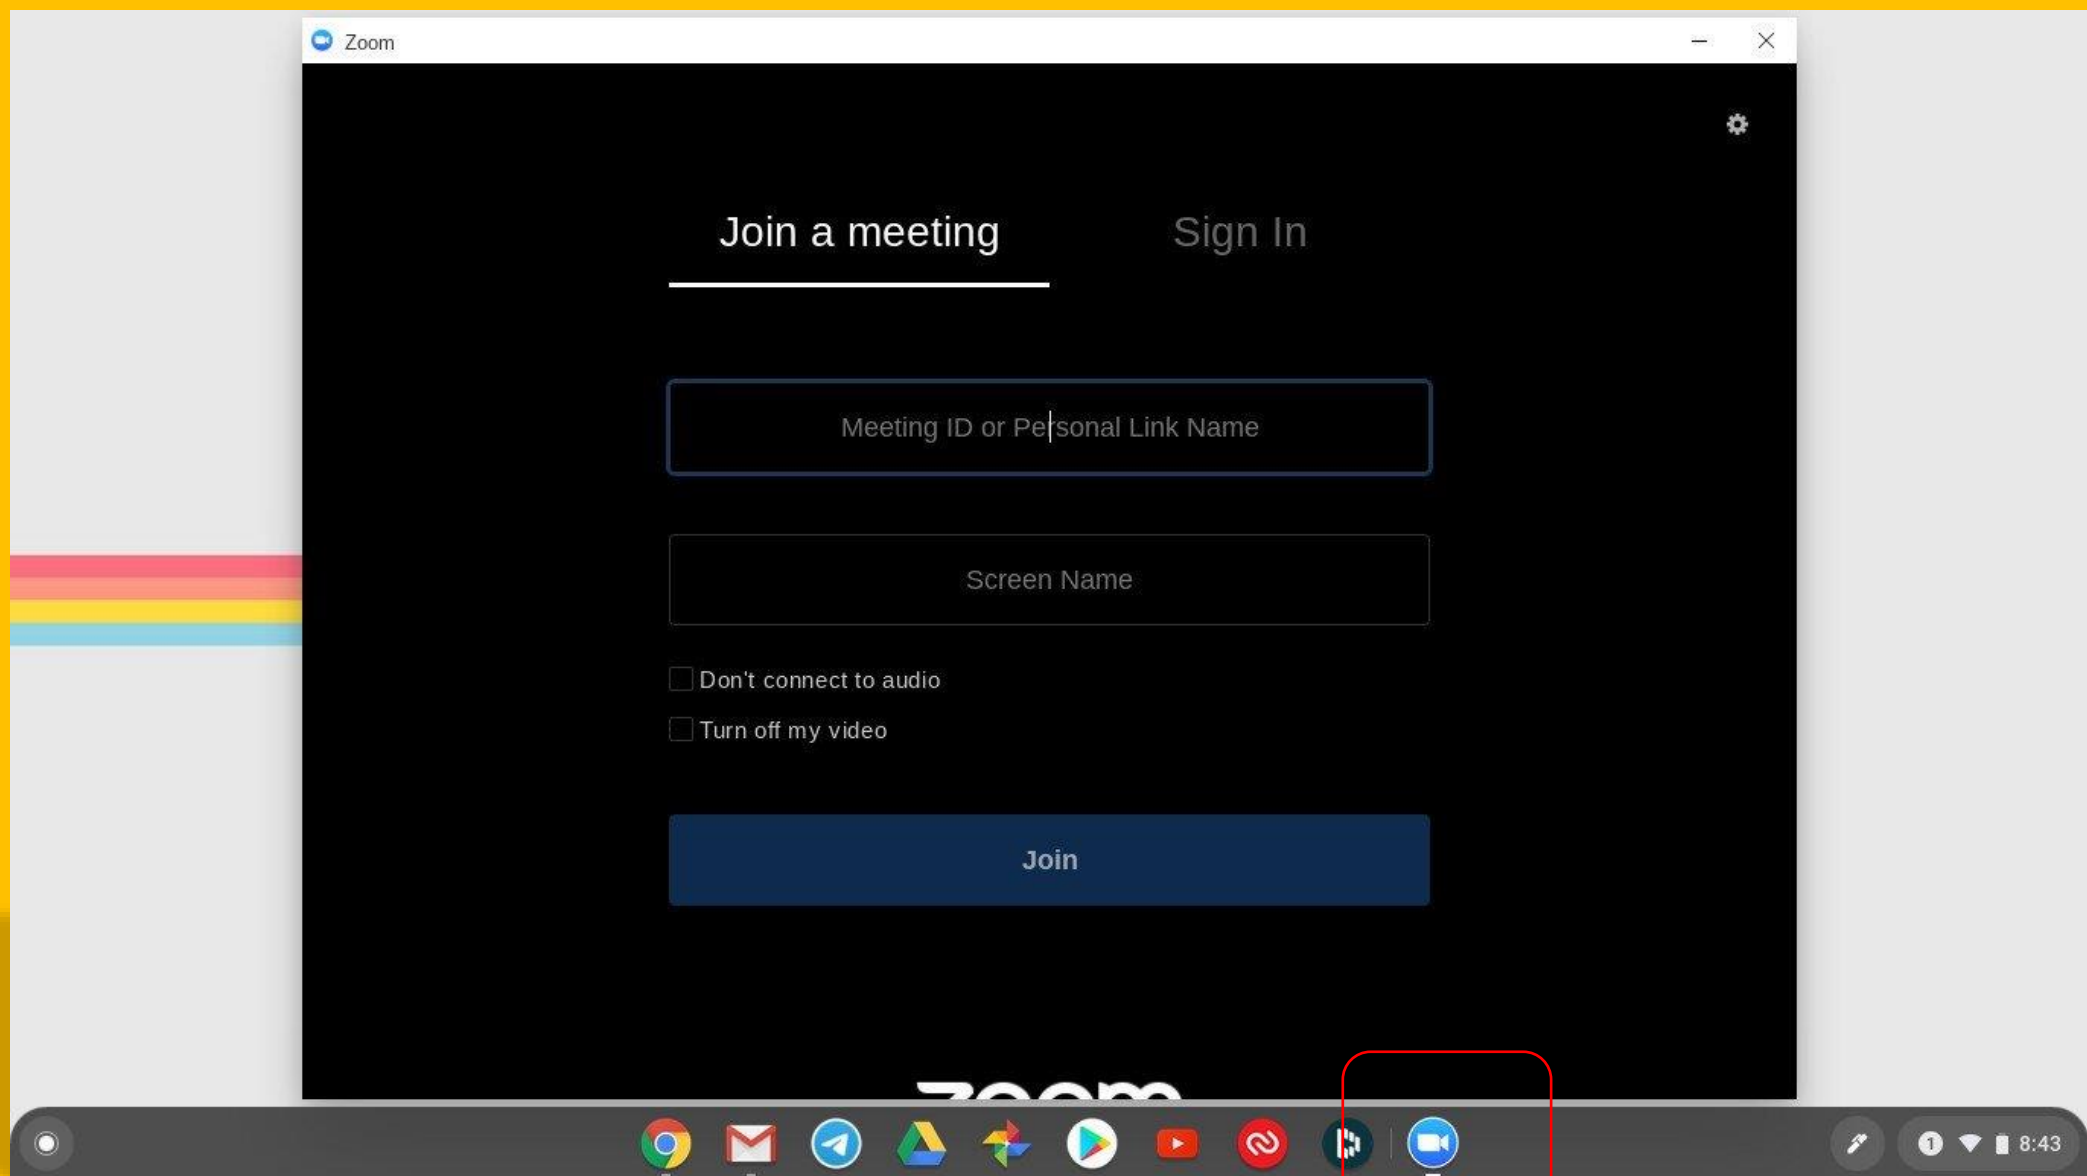


2


Open the Zoom App and enter :
Meeting ID:
Screen Name: (Students Name)
Then click Join

2A


Then enter your Meeting
Password

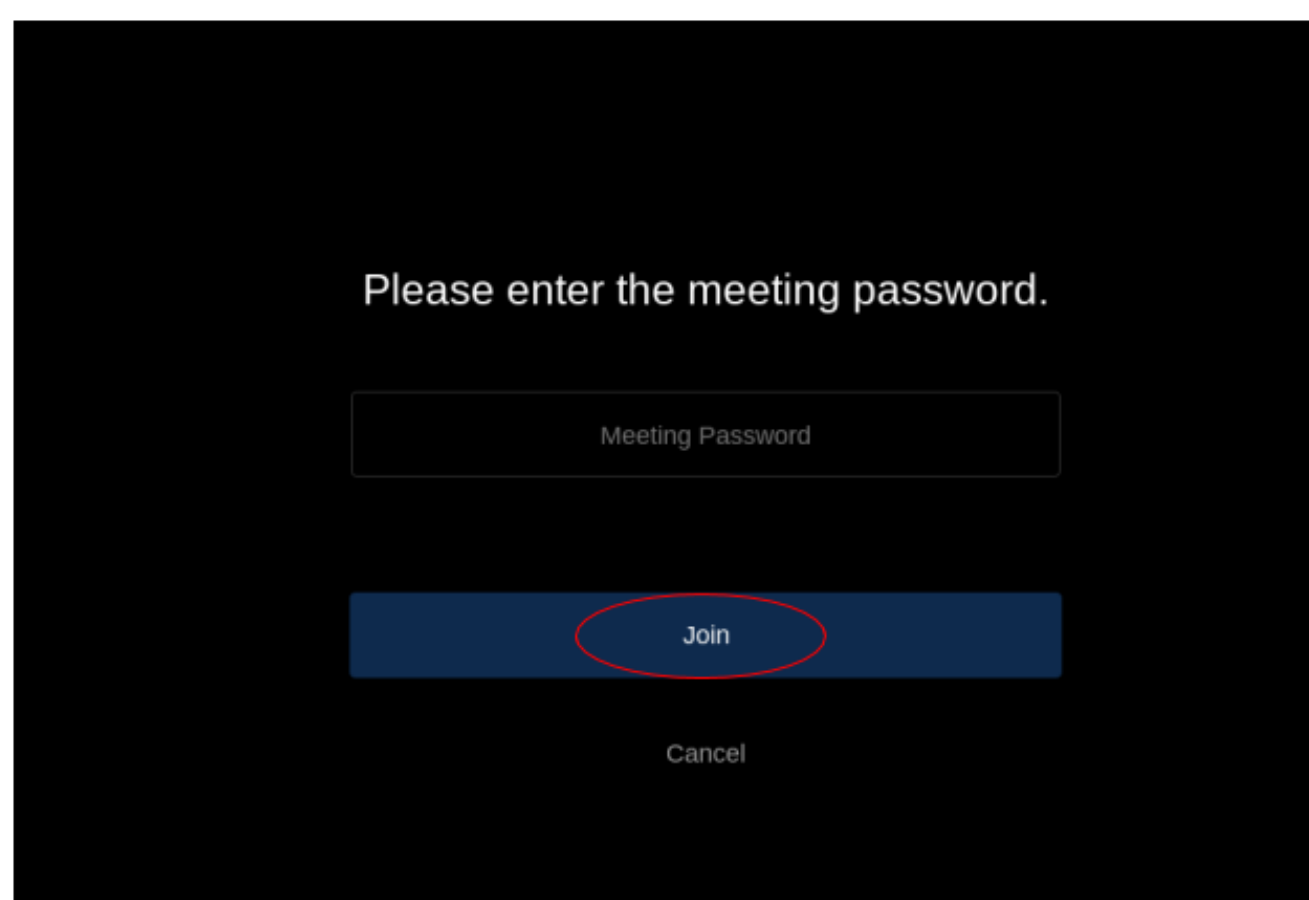


Zoom Audio

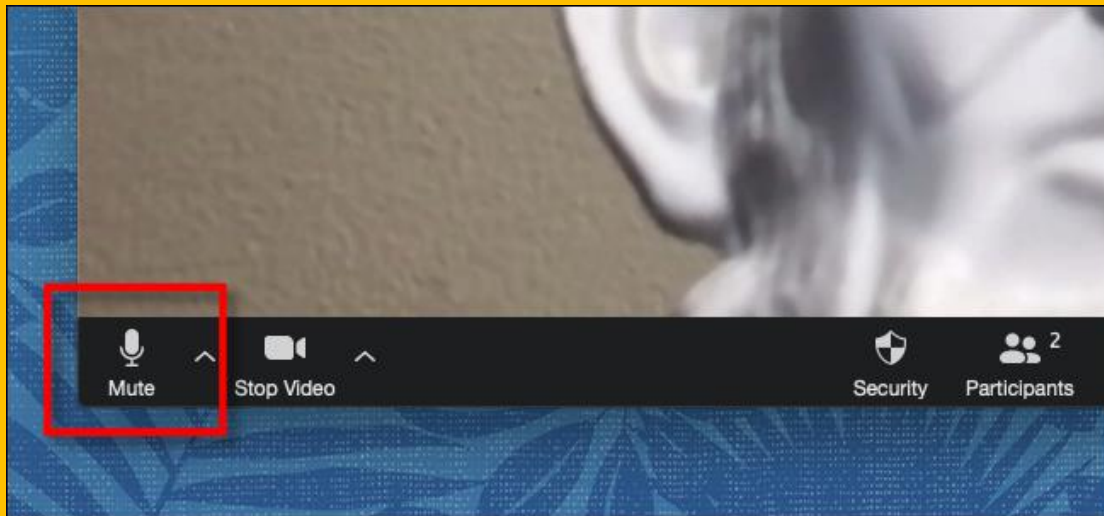

Mute: Click on the microphone

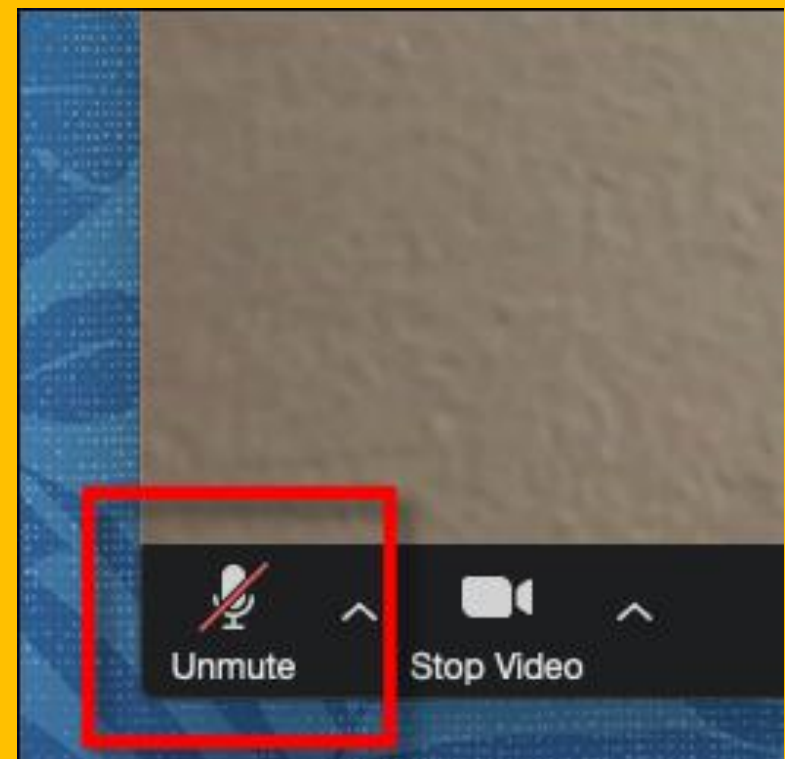

To turn off mute, click on the microphone again.

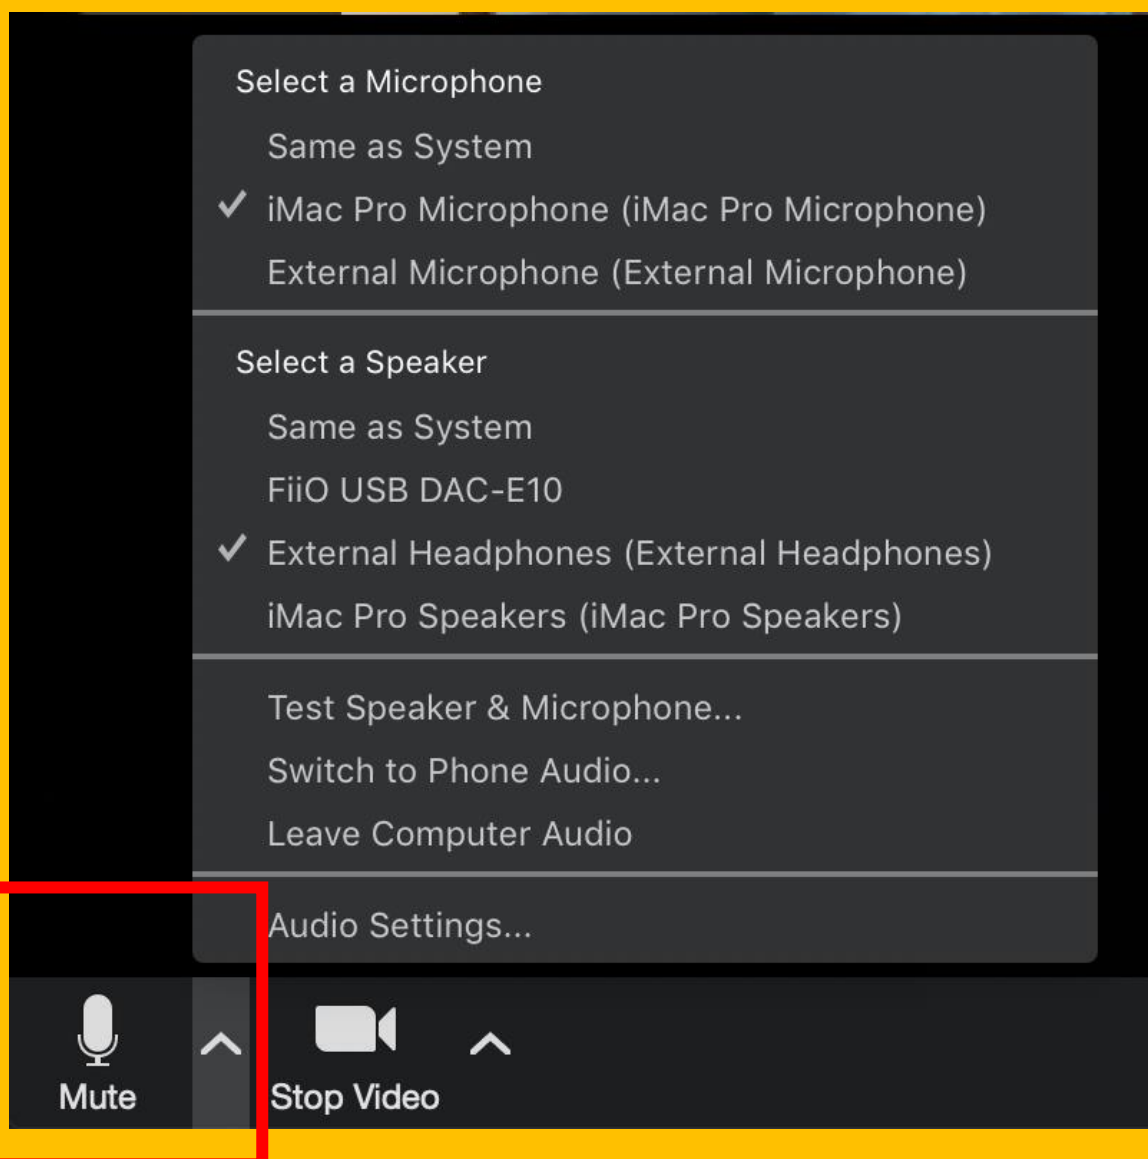

Audio Not Working:

Click on the



If the Teacher is unable to hear you:
Click on another microphone

If you are unable to hear the Teacher:
Click on another speaker

If it continues please, try Headphones.

If the issue continues please contact
Technology@dcscholars.org

Who To Contact

For questions about...	Contact
A course, assignment or resource	Your child's teacher via Dojo, Email or Google Classroom
A technology-related problem or issue	Email: Technology@dcscholars.org Phone: 202-597-1248
A personal concern regarding your child	Your child's teacher or counselor or school leader via Dojo or Email
A general question	info@dcscholars.org